


IS CY SO 50-70-100 IS SQ SO 50-70-100 IS RE SO 90-120-150 Suspension

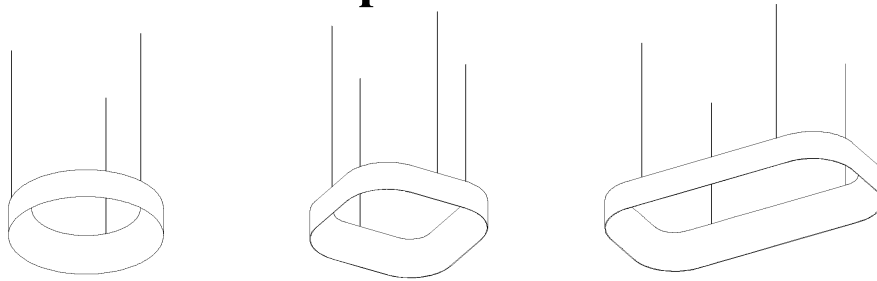



Warning:

Before proceeding with the assembly operation, disconnect the electrical supply.

Technical Data

CY SO 50	31W LED 2700°K lm3390 24V / 120V 50-60 Hz	SQ SO 50	40W LED 2700°K lm4320 24V / 120V 50-60 Hz	RE SO 90	54W LED 2700°K lm5830 24V / 120V 50-60 Hz
CY SO 70	44W LED 2700°K lm4750 24V / 120V 50-60 Hz	SQ SO 70	56W LED 2700°K lm6050 24V / 120V 50-60 Hz	RE SO 120	66W LED 2700°K lm7130 24V / 120V 50-60 Hz
CY SO 100	62W LED 2700°K lm6690 24V / 120V 50-60 Hz	SQ SO 100	80W LED 2700°K lm8640 24V / 120V 50-60 Hz	RE SO 150	78W LED 2700°K lm8430 24V / 120V 50-60 Hz


HOW TO REMOVE LAMPSHADE FROM PACKAGING

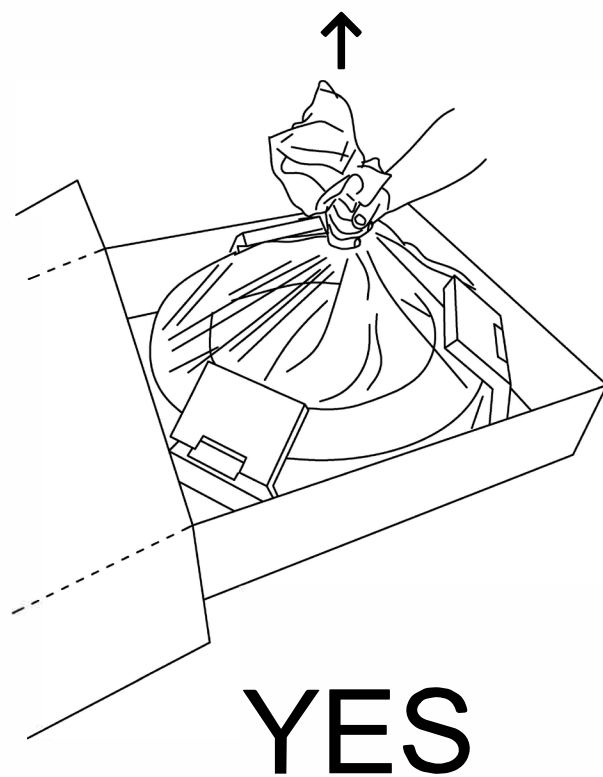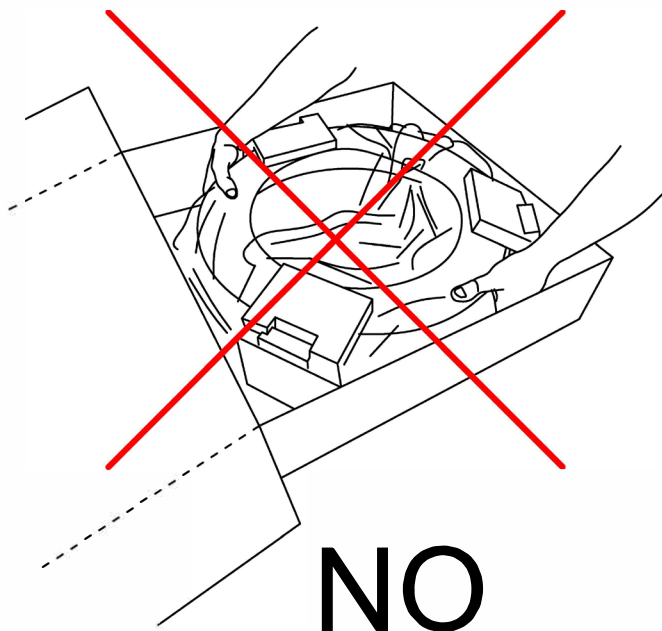


TEMPLATE FIXING POINT

This shows where to mark and drill anchor points (the red dots) and the space between them.


IS SQ SO 50

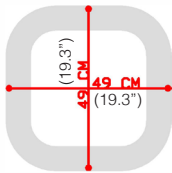

IS SQ SO 70

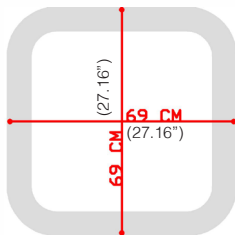


IS SQ SO 100

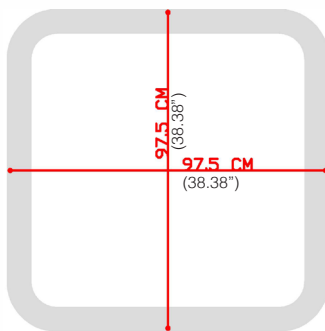


IS CY SO 50




IS CY SO 70

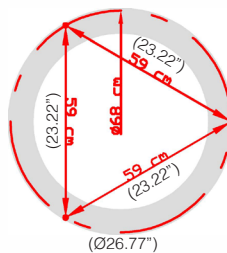


IS CY SO 100

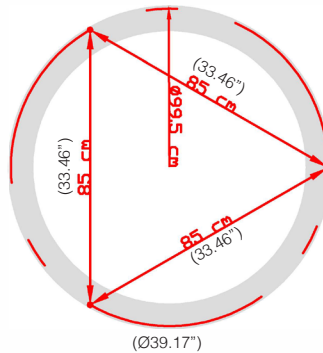


IS RE SO 90

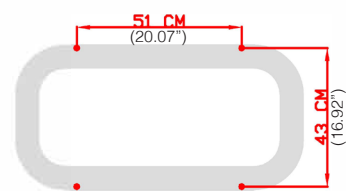

IS RE SO 120

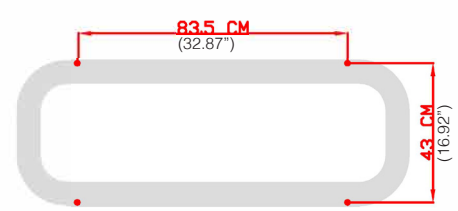

IS RE SO 150

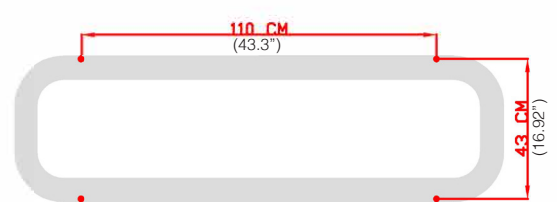



ITASHADES

INSTALLATION INSTRUCTIONS

TYPE:

PROJECT NAME:

FOLLOW THE ASSEMBLY INSTRUCTIONS BY READING THE NUMERICAL PROGRESSION.

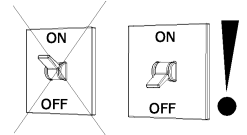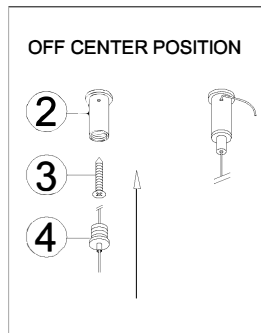

1. Mark anchor positions using previous page and drill holes for screws.
2. Place anchors over holes.
3. Install screws.
4. Install cable grips.
5. Install canopy bracket over junction box.
6. Connect 24V fixture wires to driver.
7. Connect 120V driver wires to junction box.
8. Install canopy over canopy bracket.
9. Install canopy set screws.

